# Touch Flex Arm

**Cetting Started Guide** 

#### Parts List

Locate the below items along with your tablet device and charging cable and continue to Step 1.



Touch holder



Flex Arm Stand



Security key



x4 Screws



x4 Wood Screws

## Step-by-Step Instructions



**Step 1** Remove the top bracket that holds the adhesive.



**Step 2** Attach the Touch holder to the stand and screw in the x4 screws to secure.



**Step 3** Peel off the adhesive paper from the top bracket.




**Step 4** Place the bracket in the center of the tablet and press down and hold for 20 seconds.


## Step-by-Step Instructions



**Step 5** Place the flex arm on your counter and drill pilot holes.

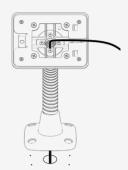

**Step 6** If you are running your charging cable through the surface, ensure to drill a larger hole to feed cable through.

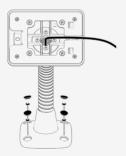

**Step 7** Screw down you Flex Arm pole using wood screws provided and then cover holes with rubber plugs.



Step 8 Finally, attach the top bracket (with tablet attached) and screw in the screw using the security key and plug in charging cable.



US Customer Support 1800 293 9703 sales@bosstab.com

Australia Customer Support 1800 870 132 sales@bosstab.com.au

#### Warranty & Returns

If you receive an item that is faulty or damaged then you can send it back for a refund, replacement or store credit & we'll pay for the return postage costs. We offer a 12 month warranty on items that are deemed defective by the manufacturer. If you have a defective product covered by this warranty, we will either repair using new or refurbished parts, or if repair is not possible, replace the item. The warranty will not cover loss or theft, nor damage deemed to be caused by misuse or unauthorized modification. To view our full returns policy & initiate a return please visit www.bosstab.com